

# Instruction Manual

MODEL MK-70




## CONTENTS


SETTING UP THE MACHINE .....	1
PRECAUTIONS .....	3
REPACKING THE MACHINE .....	4
NAME OF OPERATIONAL PARTS.....	6
ACCESSORIES .....	7
YARN PREPARATION .....	8
THREADING THE AUTO-TENSION.....	9
STITCH DIAL AND STITCH SIZE .....	10
CAM LEVER AND STITCH TYPES .....	11
NEEDLE BED AND NEEDLES .....	12
Latch Needle .....	12
Needle Positions.....	12
How a stitch is formed on the needle.....	12
CAST ON.....	13
Stripe Pattern.....	16
Removing the Fabric .....	17
BASIC TECHNIQUES.....	18
Mock Rib.....	18
Decrease and Increase of single stitch .....	20
Decrease and Increase of multiple stitches .....	21
Cast off .....	22
Pressing the mock rib .....	22
GETTING TO KNOW ABOUT PATTERN KNITTING .....	23
Operation Table.....	23
Punch Card .....	23
Setting Punch Card .....	24
Punch Card and Pattern Positions.....	25
A Card for various stitch types .....	25
For success in pattern knitting .....	25
KNIT-IN (FAIR ISLE).....	26
SLIP STITCH .....	27
TUCK STITCH .....	28
TUCK/SLIP STITCH IN COLOURS.....	29
CORD KNITTING.....	30

TAKING A TENSION GAUGE.....	31
Gauge Scale .....	31
Tension Swatch .....	31
Knitting a Tension Swatch .....	32
How to measure the tension swatch .....	33
KNITTING TECHNIQUES .....	34
Fully Fashioned Decrease .....	34
Fully Fashioned Increase.....	34
Partial Knitting by decreasing stitches.....	35
Partial Knitting by increasing stitches .....	36
Holding stitches in D position.....	37
Holding stitches on waste knitting .....	37
Holding stitches with Ravel Cord .....	38
Hemming .....	39
Picot Edge .....	39
Trimming.....	40
Buttonhole.....	41
Joining on the machine.....	42
Blind Stitch .....	43
Slip Stitch .....	43
Grafting .....	43
K1. P1. Rib .....	44
Cable Stitch.....	45
Garter Stitch .....	45
LADY'S PULLOVER .....	46
WHAT TO DO IF.....	50
INDEX.....	60


## SETTING UP THE MACHINE

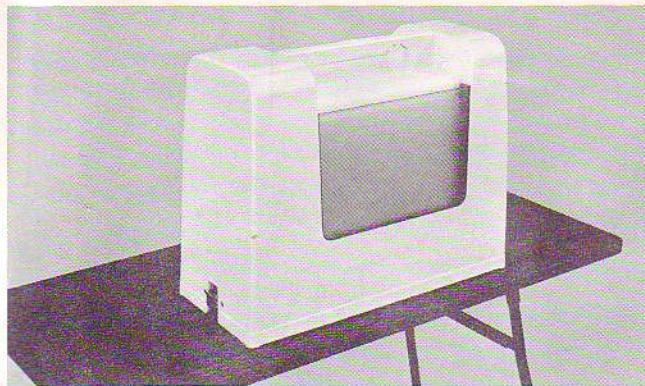

1. Place the machine on the table with its transparent book pocket facing you.

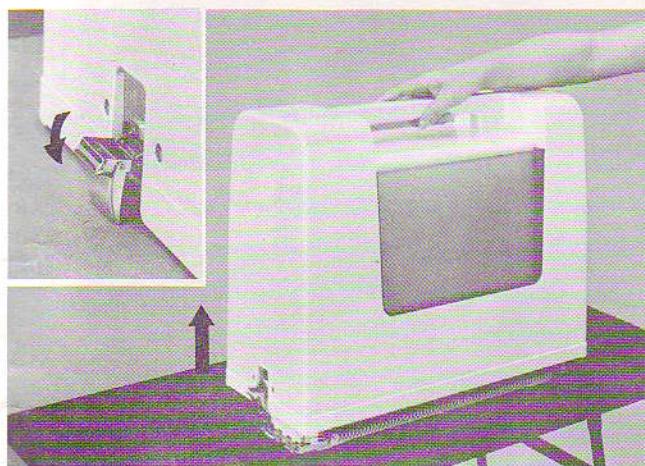


2. Unlock the latch on both sides of the case cover, and lift it up.

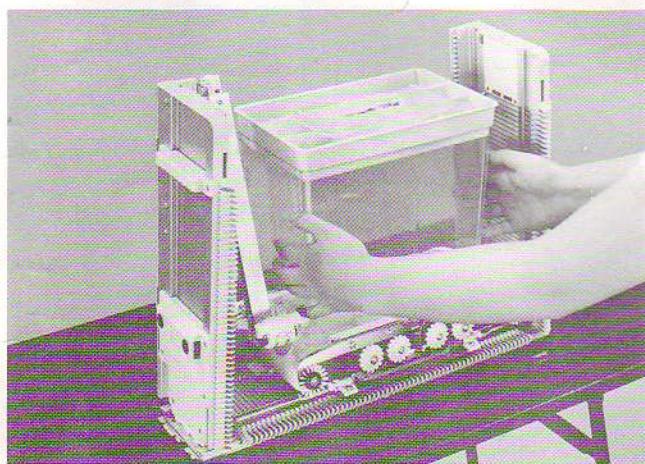

3. Lift up the transparent box.


*Use the transparent box (Utility Box) for many purposes such as to keep the yarn balls, etc.*

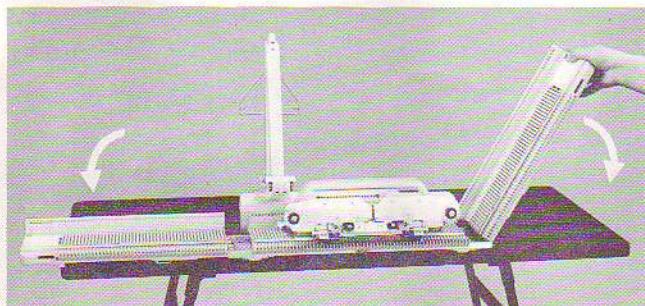


4. Hold the ends of the needle bed and gently lay down flat on the table.




5. Push in both ends of the needle bed till they lock in position with a clicking sound.

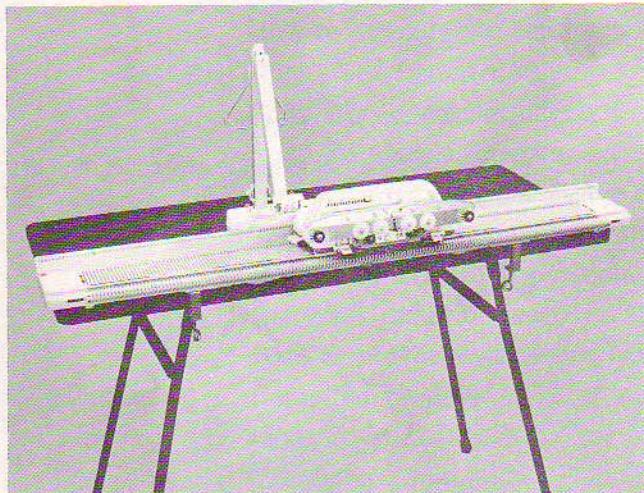


6. Take out two Clamps from the accessory box, and fix the machine as shown on the table.

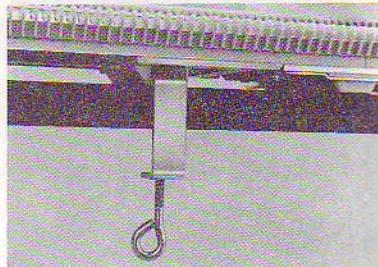

7. Stretch the Tension Post straight, and push in till it locks in position.  
DO NOT APPLY TOO MUCH FORCE.

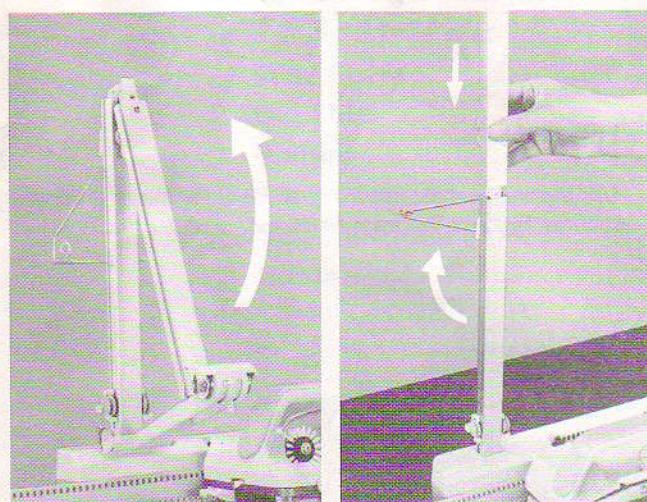


8. Raise the Yarn Guide till it locks in position.

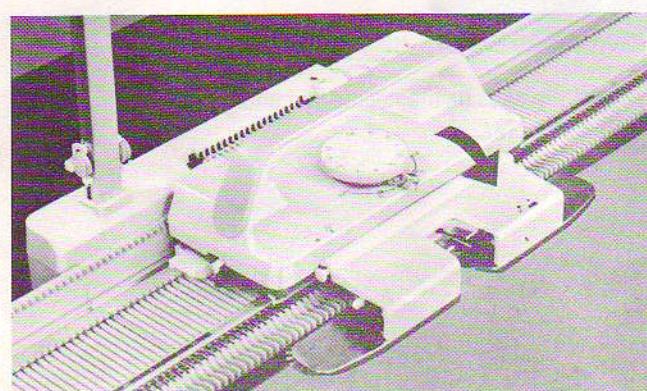


9. Turn round the Arm to the locking position.

## PRECAUTIONS

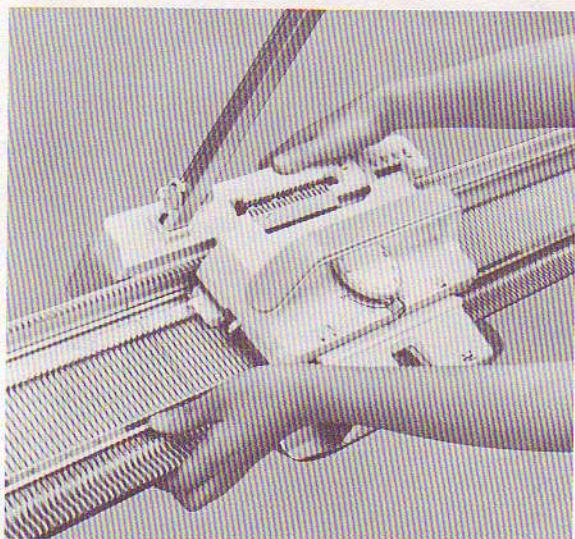


If you carry the machine as it is opened, hold centre portion of the needle bed.

**DO NOT HOLD THE ENDS OF THE NEEDLE BED**




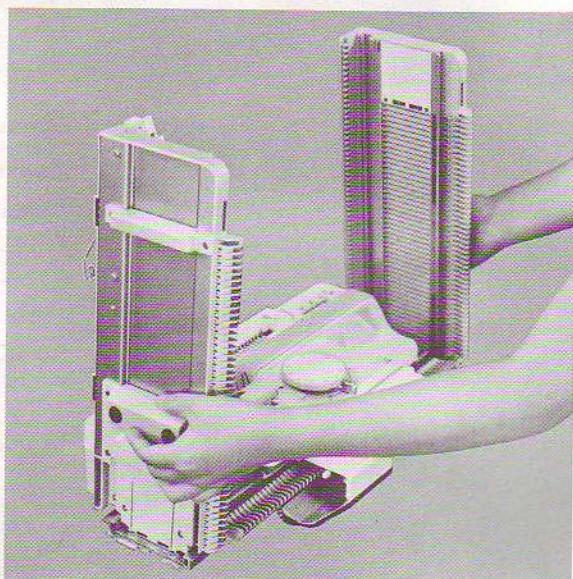


If you carry the machine as it is folded, hold the Clamp receivers as shown.

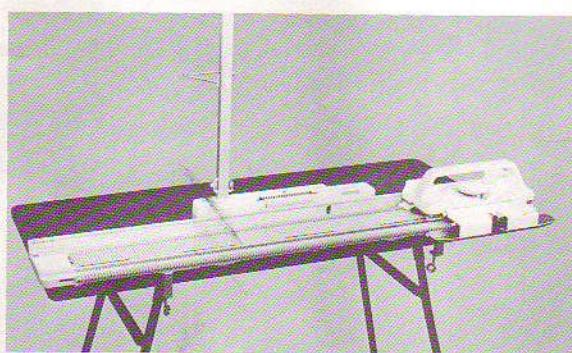

To use the machine, secure it with Clamps on the table.

## REPACKING THE MACHINE

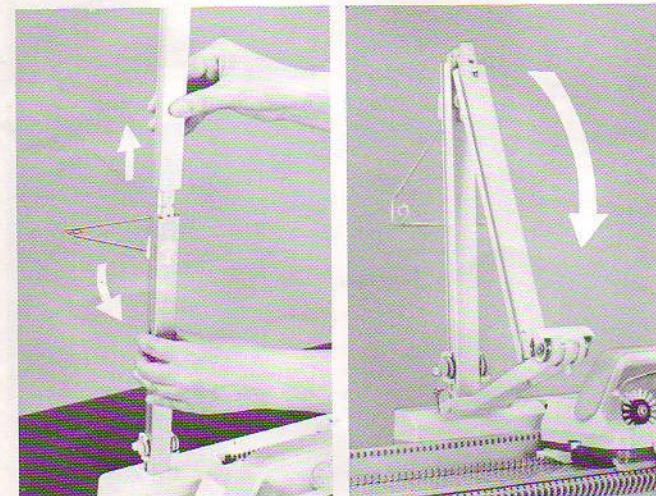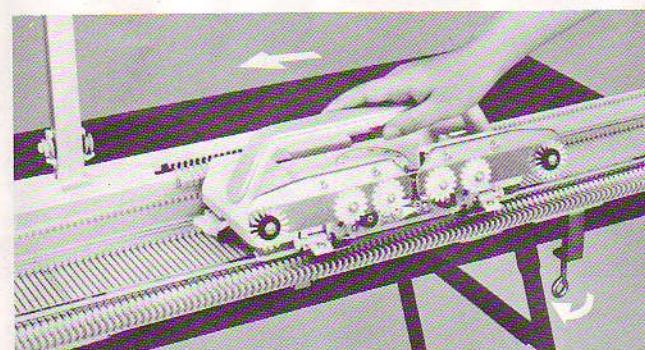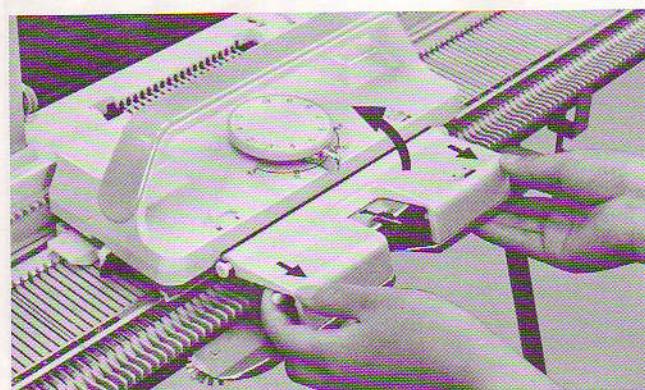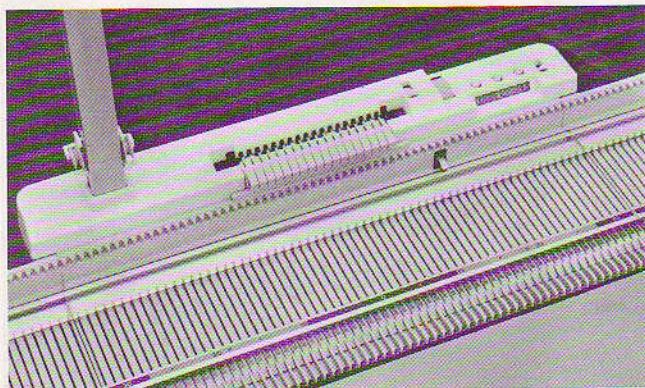

Refer to this and next pages only when you repack the machine.

1. Align all the needles correctly in "A" position, using the Needle Pusher.

Remove the yarn from the Auto-Tension before repacking the machine.


2. Pull the Arm Lever at both sides of the Arm towards you and lift up the Arm till it gives out clicking sound.

3. Bring the Carriage to the centre of the needle bed.

4. Remove both Clamps.


5. Fold down the Yarn Guide.

6. Pull up the upper part of the Tension Post to separate at its centre, and fold it towards you.

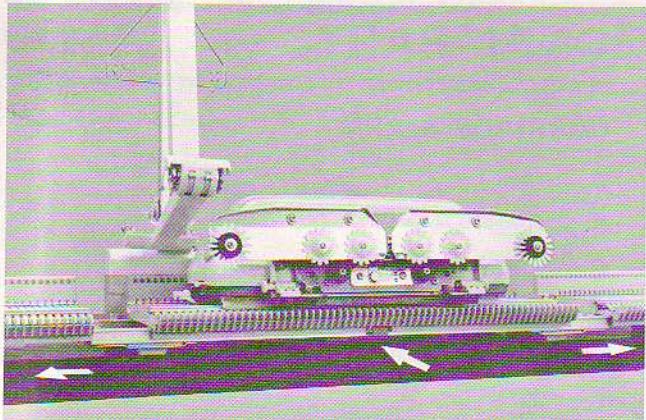


7. Press the Red Button (Lock Lever Button) at the front bottom edge of the needle bed.

Pull out both ends of the needle bed as far as they come out.

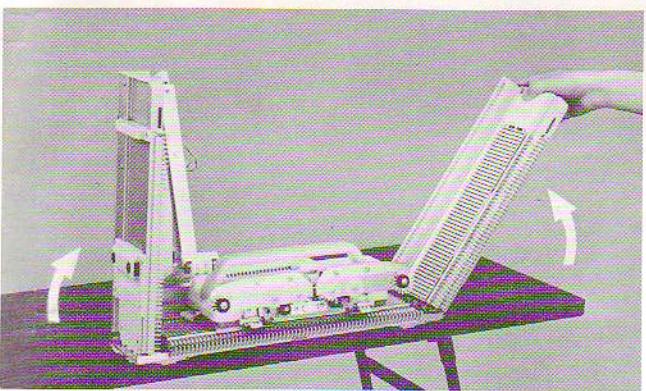


8. Fold up both ends of the needle bed till they stop in locked position.

DO NOT FOLD UP THE NEEDLE BED UNTIL BOTH ENDS COME OUT COMPLETELY.

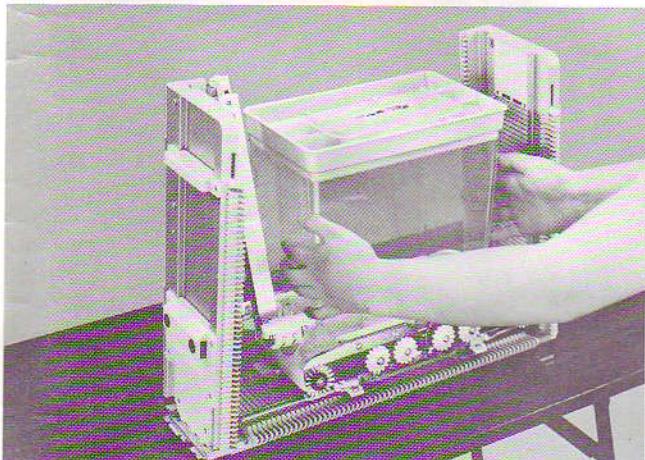


9. Replace the utility box to the original position, and place the case cover over it.

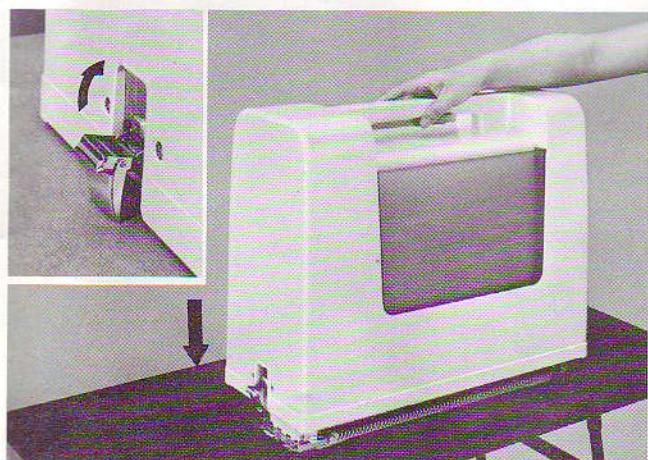

10. Lock the latch at both sides of Case Cover.


MAKE SURE THE LATCHES ARE SECURELY LOCKED BEFORE HOLDING UP THE MACHINE.

# NAME OF OPERATIONAL PARTS

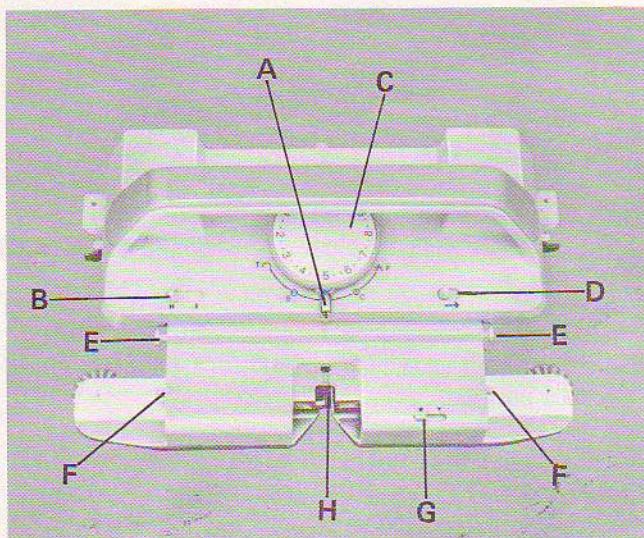


## CARRIAGE & ARM

- A – Cam Lever
- B – Russel Lever
- C – Stitch Dial
- D – Release Lever
- E – Arm Coupling Pin
- F – Arm Lever
- G – Cast-on Lever
- H – Yarn Feeder











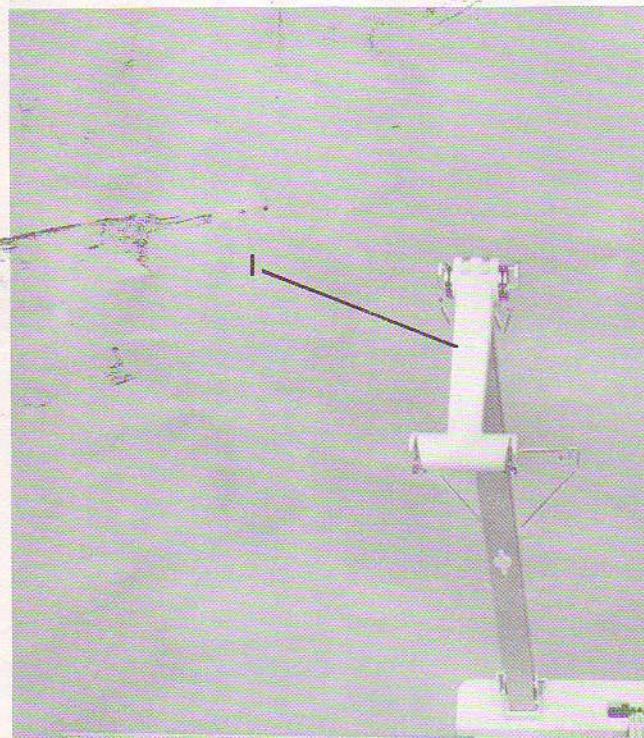


## NEEDLE BED

- I – Auto-Tension
- J – Punch Card Slit
- K – Card Lever
- L – Card Dial
- M – Row Counter
- N – Set Lever

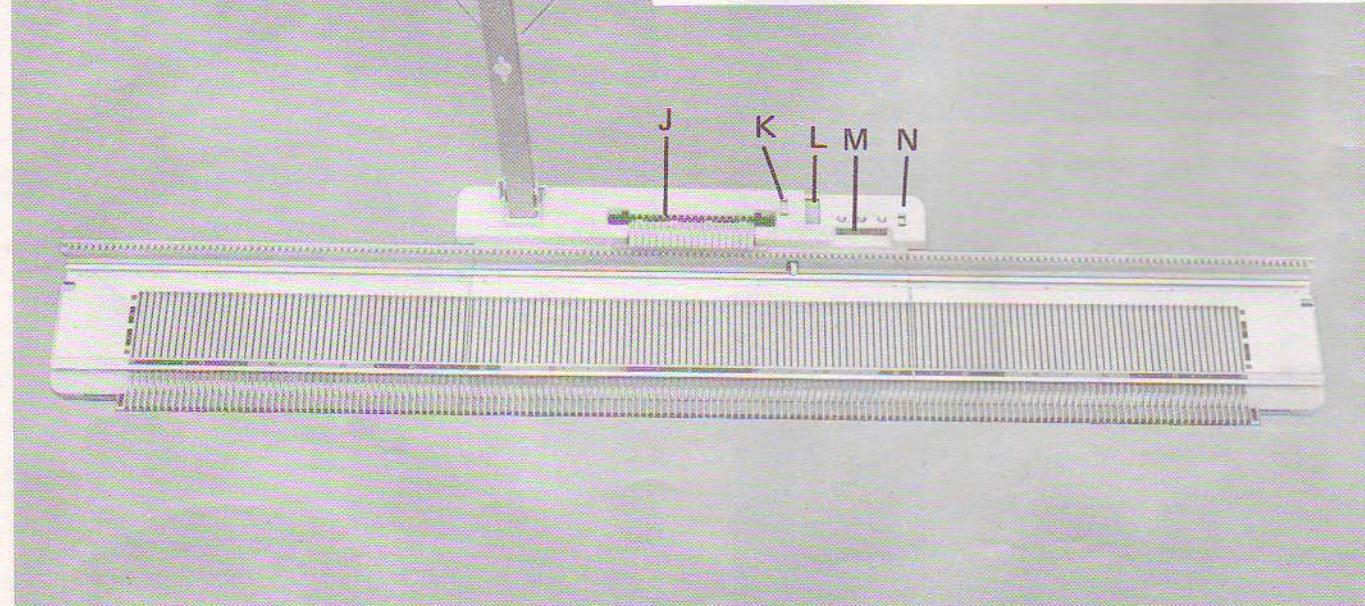

# ACCESSORIES

  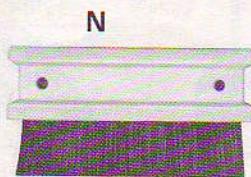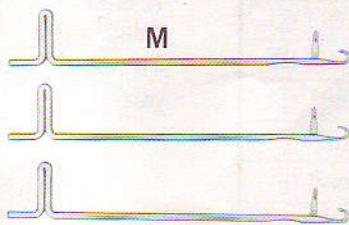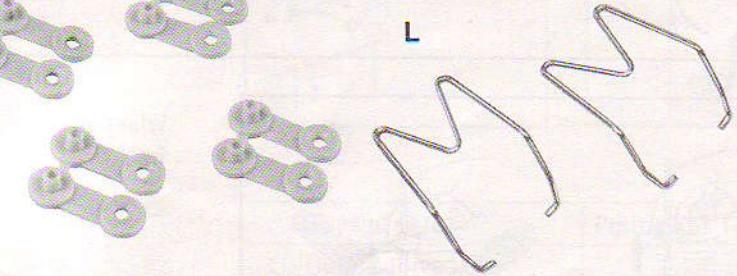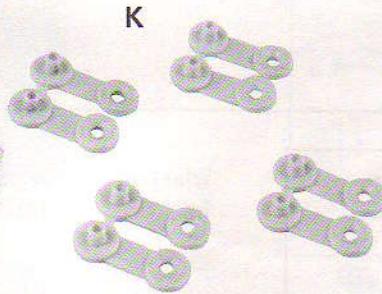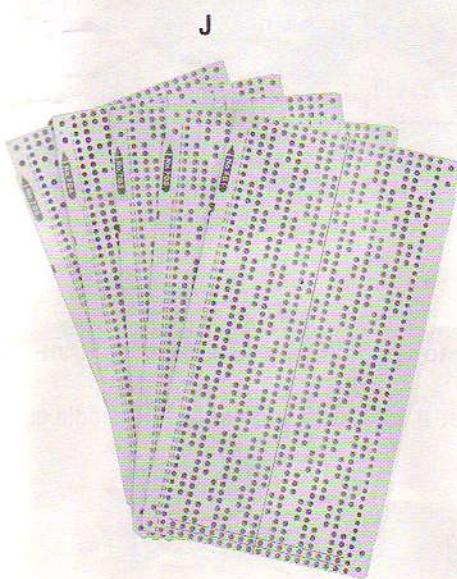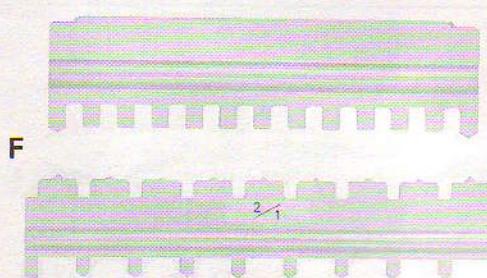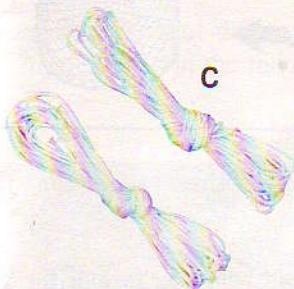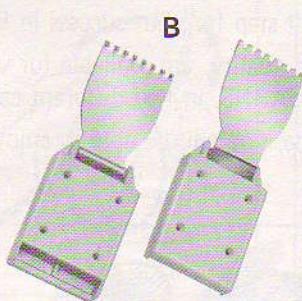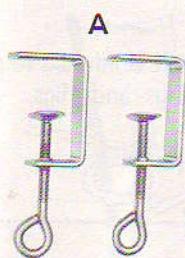

- A - Clamp (2)
- B - Claw Weight (2)
- C - Ravel Cord (2)
- D - Tapestry Needle
- E - Gauge Scale
- F - Needle Pusher 1/1, 2/1
- G - Transfer Tool 1-2, 2-3
- H - Tappet Tool
- I - Crochet Hook
- J - Punch Card (5)
- K - Card Snap (4)
- L - Yarn Rest (2)
- M - Spare Needle (3)
- N - Cleaning Brush
- O - Oil

(Numbers in brackets refer to quantity.)